


mounting direction

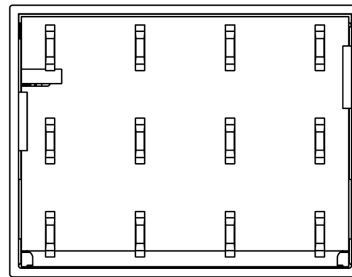

view of plug

DESCRIPTION

A world first - the patented MicroPlex® is the smallest CAN controller with the highest integration density. On the footprint of two Micro 280 relays and a drag-and-drop configuration tool, CAN bus-capable power distribution systems can easily be built.

TECHNICAL DATA

Housing	PA66GF30
Connector	2.8 mm tab
Weight	50 g
Temperature range (ISO 16750-4 compliant)	- 40 °C to +85 °C
Environmental protection acc. to ISO 20653	IP6K8 with correct mounting position (connection pins vertically downwards) and use of the waterproof socket otherwise IP40
Over-current protection	1 A + load
Total inputs and outputs	7
Inputs	Configurable as: N.A.
Outputs	Configurable as: Digital output PWM output
Supply voltage	9-32 V
Overvoltage protection	≥ 33 V
Current consumption	23 mA at 12 V and 24 V
Quiescent current	170 µA at 12 V 250 µA at 24 V
Reverse polarity protection	Yes
CAN Interfaces	CAN interface 2.0 A/B, ISO 11898-5 compliant

REGULATORY APPROVALS AND TESTING

E1 Label	10 R - 05 8490
Electrical tests	Acc. to ISO 16750: Short circuit protection Reverse polarity Storage test Tmax and Tmin Operational Tmax and Tmin
	Acc. to ISO 7637 - 2:2004: Puls 1, 2a, 2b, 3a, 3b, 4
Patent Number	3384603

SOFTWARE/PROGRAMMING

Programming System	MRS APPLICS STUDIO The Applics Studio is the new development and tool platform for our assemblies. Program your MRS controls quickly and easily with our stand-alone software. The focus is on your application.
--------------------	--

OUTPUT FEATURES - SUMMARY

Pin 2, 8, 9, 10, 11, 12			Pin 7		
Protective circuit for inductive loads	Via freewheeling diode		Protective circuit for inductive loads	Via freewheeling diode	
Wire fault diagnostics	Possible via current sense		Wire fault diagnostics	Possible via current sense	
Short circuit diagnostics	Possible via current sense		Short circuit diagnostics	Possible via current sense	
Digital, positive switching (high side; see A)	Switching voltage Switching current	≤ 32 V depending on the total load, see table below 1 mA ≈ 2.2 Digits	Digital, positive switching (high side; see A)	Switching voltage Switching current	≤ 32 V abhängig von der Gesamtlast, siehe Tabelle unten 1 mA ≈ 2.2 Digits
	Conversion factor Current sense			Conversion factor Current sense	
PWM-output (see B)	Output frequency Switching current	≤ 500 Hz depending on the total load, see table below	Short circuit protection against GND and U _B	Internal overtemperature protection, latch-off can be realized by software application	
Short circuit protection against GND and U _B	Internal overtemperature protection, latch-off can be realized by software application				

PERFORMANCE TESTS AT T_{MAX}

Test without PWM	Tested channel	Last	Duration	Test with PWM	Tested channel	PWM / DC	Load	Duration
1	All channels	2.2 A for each output (Σ15.4 A)	Permanent	1	DO_OUTPUT_1 DO_OUTPUT_2 DO_OUTPUT_5 DO_OUTPUT_6	200 Hz 50 %	1.8 A for each output (Σ 7.2 A)	Permanent
2	channels DO_OUTPUT_1 bis DO_OUTPUT_4	2.5 A for each output (Σ 10 A)	Permanent	2	DO_OUTPUT_1 DO_OUTPUT_2 DO_OUTPUT_5 DO_OUTPUT_6	500 Hz 50 %	1.3 A for each output (Σ 5.2 A)	Permanent
3	DO_OUTPUT_2 DO_OUTPUT_3 DO_OUTPUT_5 DO_OUTPUT_6	2 x 2.5 A and 2 x 3.5 A (Σ 12 A)	30 Minuten					


PIN ASSIGNMENT POWER SUPPLY AND INTERFACES

Pin	Description	Pin	Description
1	Ground	6	Battery/ignition contact KL 15
3	Operating voltage		

PIN ASSIGNMENT INPUTS AND OUTPUTS

Pin	Signal	Description	Pin	Signal	Description
2	DO_OUTPUT_6 PWM_OUTPUT_6 AI_CS_2	Digital output OUTPUT_6 with PWM-possibility and current feedback	9	DO_OUTPUT_4 PWM_OUTPUT_4 AI_CS_9	Digital output OUTPUT_4 with PWM-possibility and current feedback
7	DO_OUTPUT_7 AI_CS_7	Digital output OUTPUT_7 with current feedback	10	DO_OUTPUT_3 PWM_OUTPUT_3 AI_CS_10	Digital output OUTPUT_3 with PWM-possibility and current feedback
8	DO_OUTPUT_5 PWM_OUTPUT_5 AI_CS_8	Digital output OUTPUT_6 with PWM-possibility and current feedback	11	DO_OUTPUT_2 PWM_OUTPUT_2 AI_CS_11	Digital output OUTPUT_2 with PWM-possibility and current feedback
			12	DO_OUTPUT_1 PWM_OUTPUT_1 AI_CS_12	Digital output OUTPUT_1 with PWM-possibility and current feedback

Notch

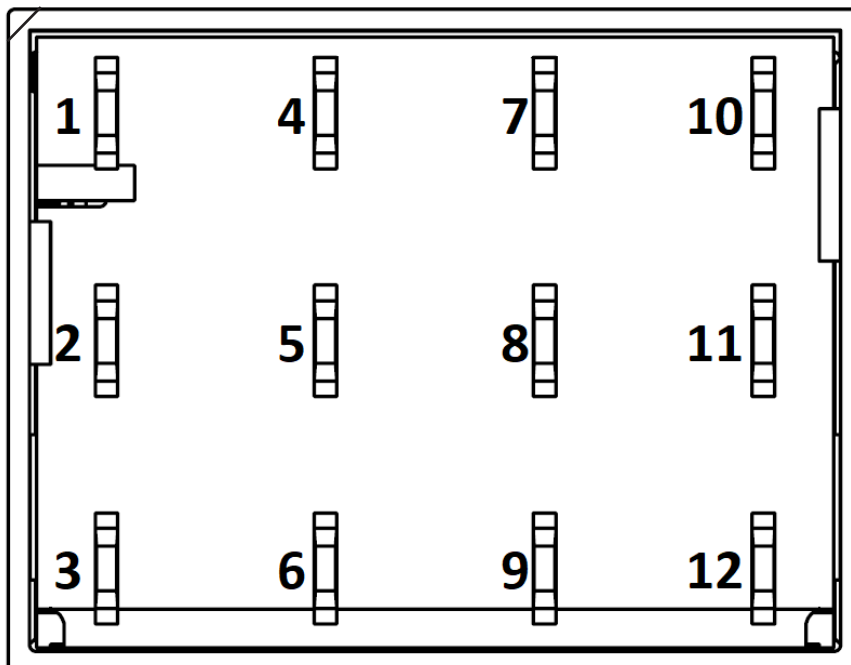


Pin assignment - bottom view

When connecting the module, it is important to pay attention to the correct terminal assignment and direction (see notch) of the module. Improper connection (such as twisting or shifting) can cause unexpected behavior and / or dangerous situations!

PIN - FEATURE MAP


Outputs		
Pin	Digital output	PWM output
2	DO_OUTPUT_6	PWM_OUTPUT_6
7	DO_OUTPUT_7	
8	DO_OUTPUT_5	PWM_OUTPUT_5
9	DO_OUTPUT_4	PWM_OUTPUT_4
10	DO_OUTPUT_3	PWM_OUTPUT_3
11	DO_OUTPUT_2	PWM_OUTPUT_2
12	DO_OUTPUT_1	PWM_OUTPUT_1

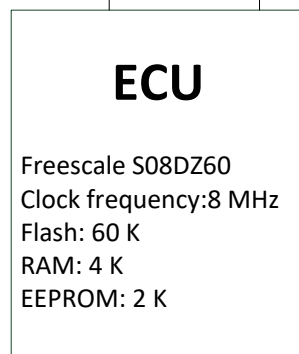





Interfaces		
Pin	Signal	Description
4	CAN_L	CAN Bus low
5	CAN_H	Can Bus high

Power Supply		
Pin	Signal	Description
1		Ground
3		Supply voltage
6	AI_KL15	Ignition
	DO_POWER	Self holding, even when Pin X101.6 is off

BLOCK FUNCTION DIAGRAM

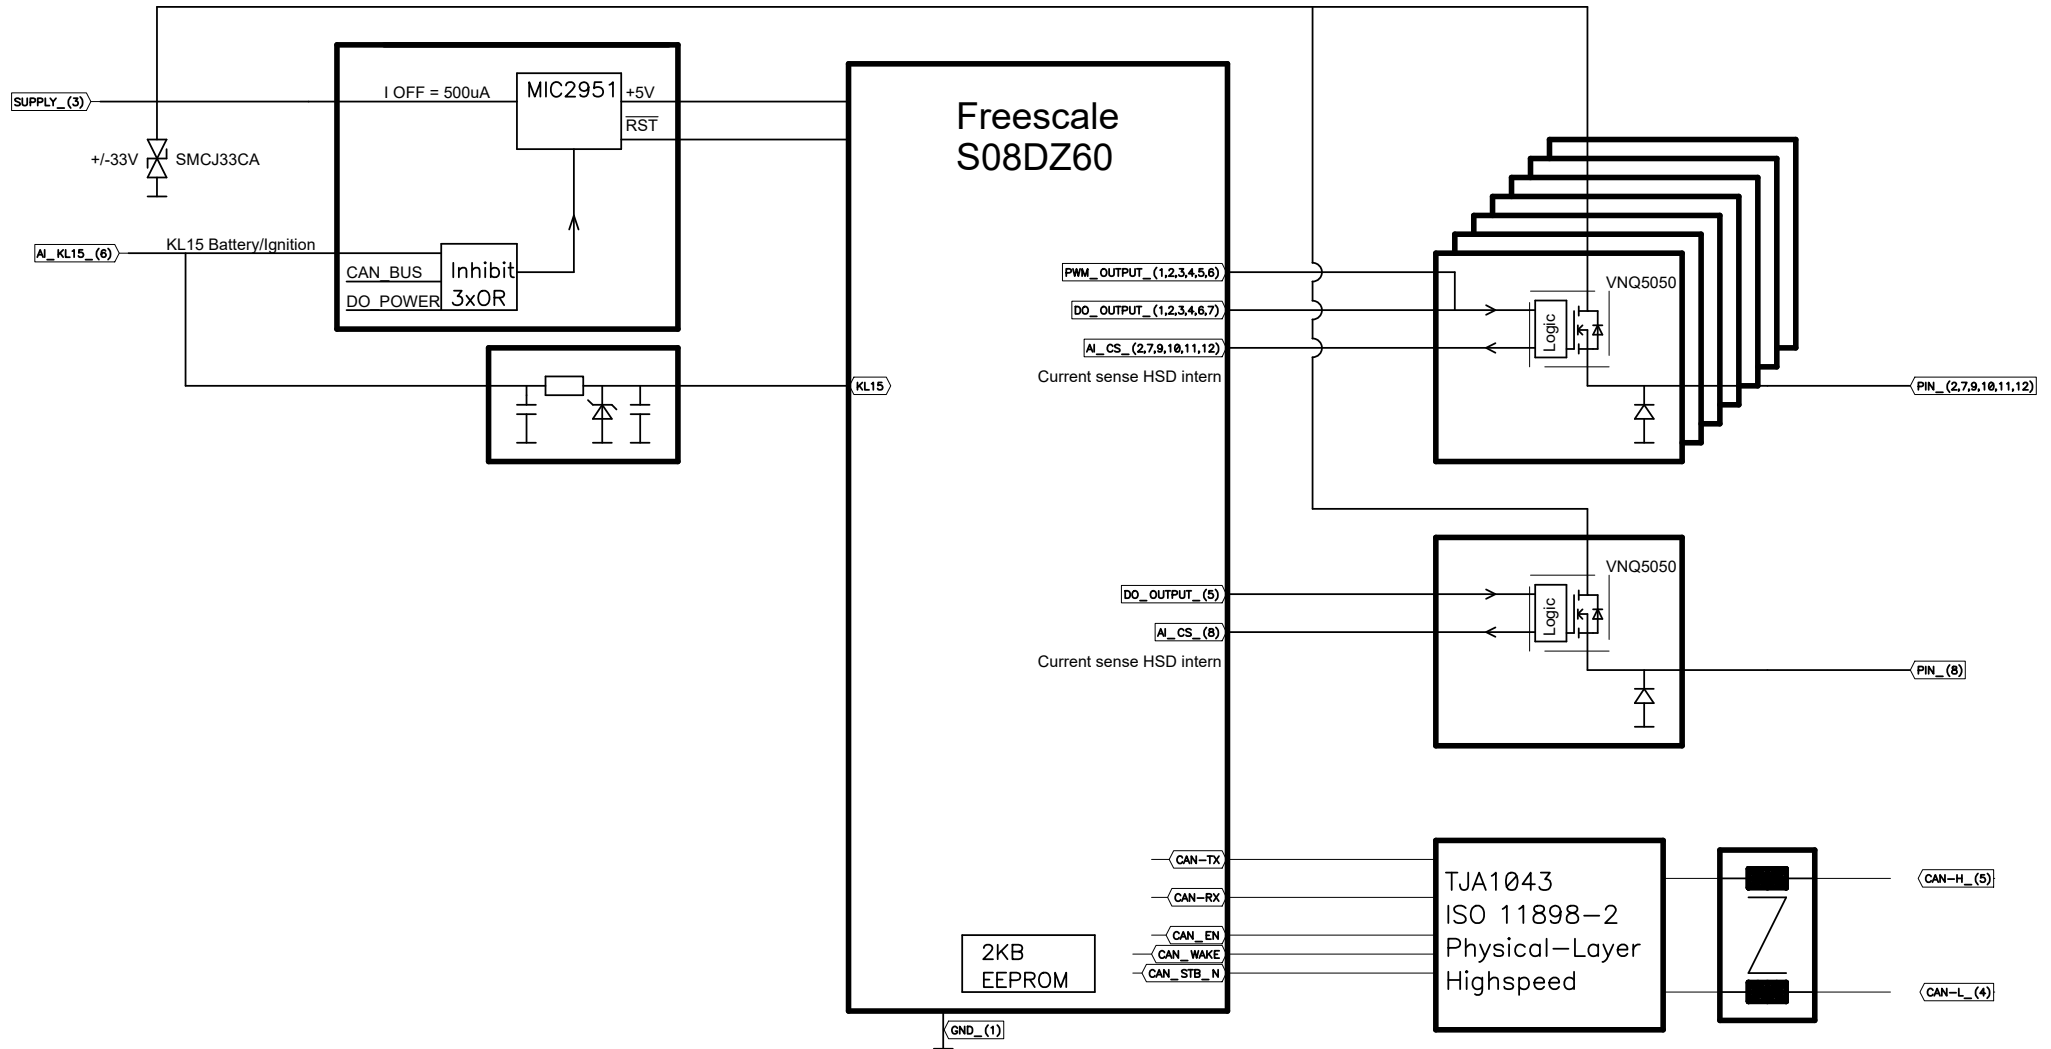

TECHNICAL DRAWING IN MM [INCH], TOLERANCES ACCORDING TO ISO 2768-1 V

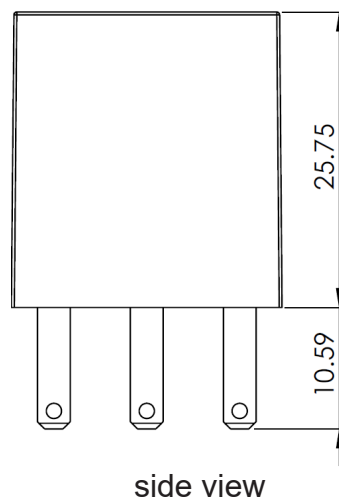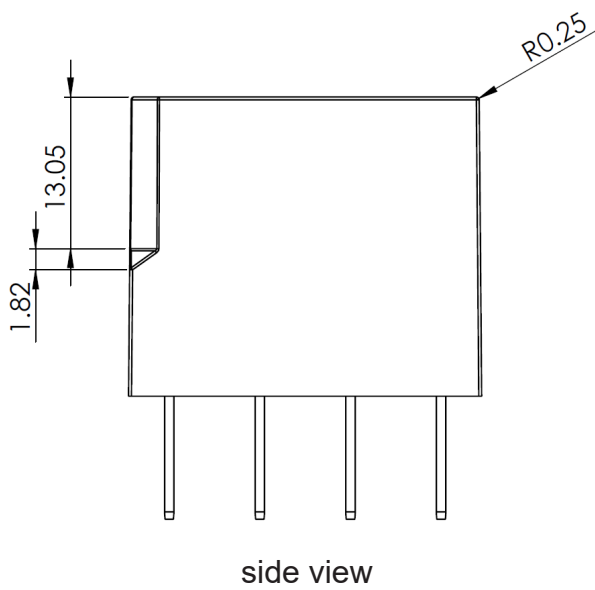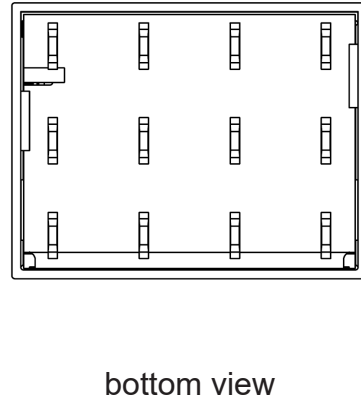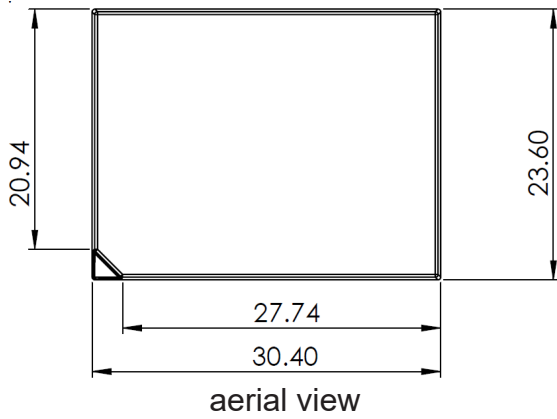


ASSEMBLY OPTIONS AND ORDER INFORMATION

	Outputs			CAN Bus	Wake-Up
	A Voltage 0-30V	B Digital output	C PWM-Output	High-Speed	
1.133.300.00		2 7 8 9 10 11 12	2 8 9 10 11 12	4 5	CAN KL15
1.133.301.00	6 (KL 15)	2 7 8 9 10 11 12	2 8 9 10 11 12	4 5	CAN

SCIP number: c4070de7-fe44-4fbc-830a-6aa60fc02d29

ACCESSORIES

Description	Order number
Programming tool MRS Applies Studio	1.100.200.01
MicroPlex socket	1.017.055.0000
Programming cable set MicroPlex 7X/7L/7H	302365
Crimp contact set with wire seals	1.017.055.1003
PCAN-USB Interface	105358
Socket Microplex waterproof	1.017.055.1000




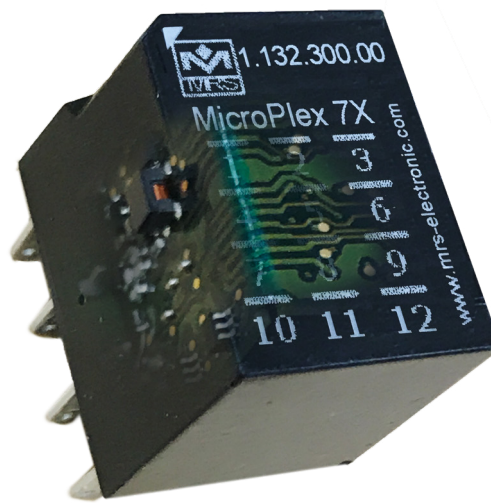


MANUFACTURER



MRS Electronic GmbH & Co. KG
Klaus-Gutsch-Str. 7
78628 Rottweil
Germany

NOTES ON WIRING AND CABLE ROUTING


Hightside outputs may only be switched to ground.

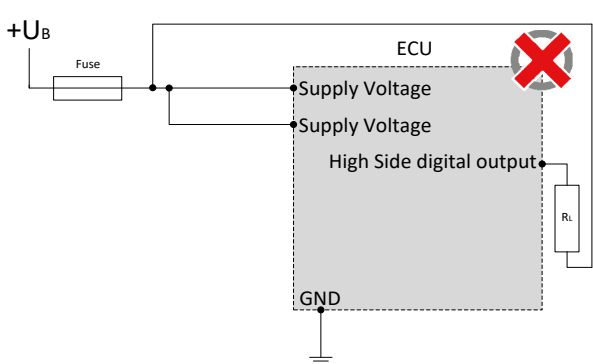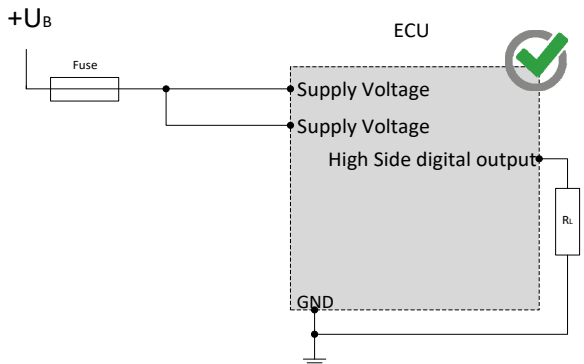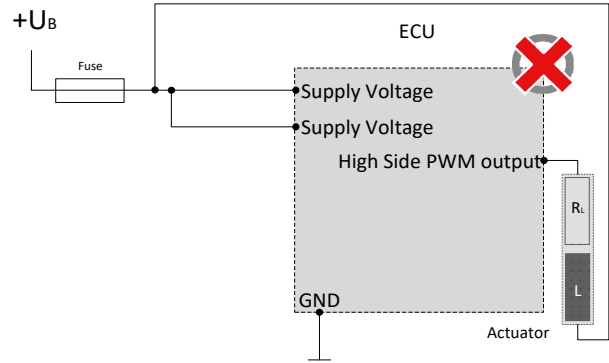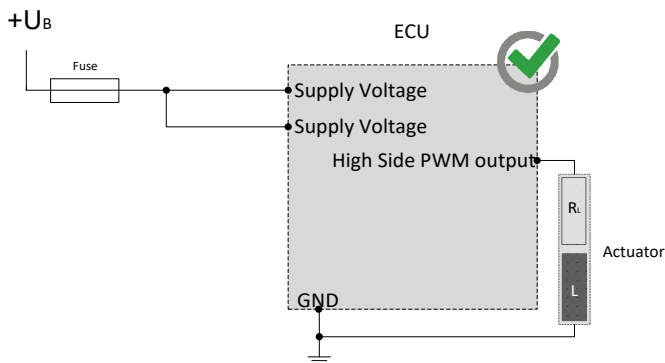

The sensor supplies can be "lifted" through an external circuitry, for example the creation of higher voltage, as they only work as a voltage source but not as voltage drain. The lift of a voltage source may lead to unforeseen malfunctions and damages of the control unit in case of permanent operation.

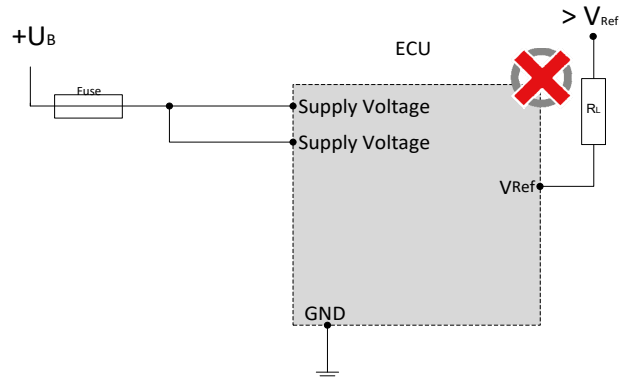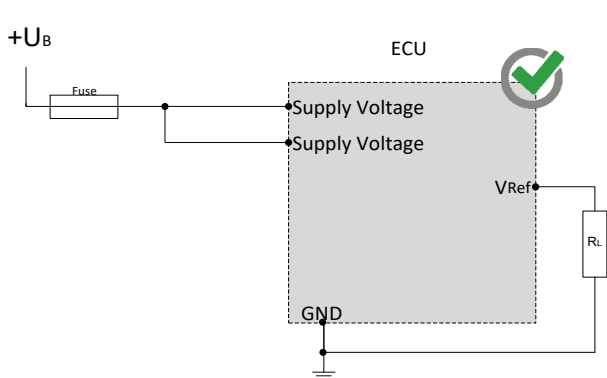

CAN bus communication is the main communication between the control unit and the vehicle. Therefore, connect the CAN bus with special care and check the correct communication with the vehicle to avoid undesired behavior.

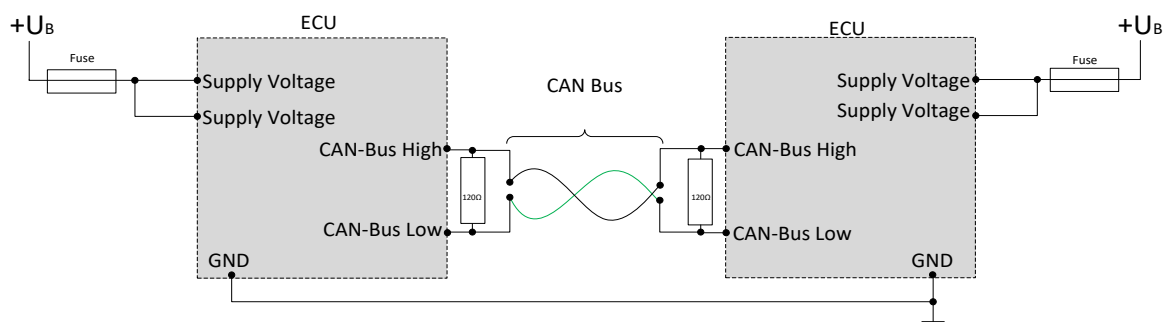

SAFETY AND INSTALLATION INFORMATION

It is essential to read the instructions in full thoroughly before working with the device.

Please note and comply with the instructions in the operating instructions and the information in the device data sheet, see www.mrs-electronic.com

Staff qualification: Only staff with the appropriate qualifications may work on this device or in its proximity.

SAFETY



WARNING! Danger as a result of a malfunction of the entire system.

Unforeseen reactions or malfunctions of the entire system may jeopardise the safety of people or the machine.

- Ensure that the device is equipped with the correct software and that the wiring and settings on the hardware are appropriate.



WARNING! Danger as a result of unprotected moving components.

Unforeseen dangers may occur from the entire system when putting the device into operation and maintaining it.

- Switch the entire system off before carrying out any work and prevent it from unintentionally switching back on.
- Before putting the device into operation, ensure that the entire system and parts of the system are safe.
- The device should never be connected or separated under load or voltage.



CAUTION! Risk of burns from the housing.

The temperature of the device housing may be elevated.

- Do not touch the housing and let all system components cool before working on the system.

PROPER USE

The device is used to control or switch one or more electrical systems or sub-systems in motor vehicles and machines and may only be used for this purpose. The device may only be used in an industrial setting.



WARNING! Danger caused by incorrect use.

The device is only intended for use in motor vehicles and machines.

- Use in safety-related system parts for personal protection is not permitted.
- Do not use the device in areas where there is a risk of explosion.

Correct use:

- operating the device within the operating areas specified and approved in the associated data sheet.
- strict compliance with these instructions and no other actions which may jeopardise the safety of individuals or the functionality of the device.

Obligations of the manufacturer of entire systems

It is necessary to ensure that only functional devices are used. If devices fail or malfunction, they must be replaced immediately.

System developments, installation and the putting into operation of electrical systems may only be carried out by trained and experienced staff who are sufficiently familiar with the handling of the components used and the entire system.

It is necessary to ensure that the wiring and programming of the device does not lead to safety-related malfunctions of the entire system in the event of a failure or a malfunction. System behaviour of this type can lead to a danger to life or high levels of material damage.

The manufacturer of the entire system is responsible for the correct connection of the entire periphery (e.g. cable cross sections, correct selection/connection of sensors/actuators).

Opening the device, making changes to the device and carrying out repairs are all prohibited. Changes or repairs made to the cabling can lead to dangerous malfunctions. Repairs may only be carried out by MRS.

Installation

The installation location must be selected so the device is exposed to as low a mechanical and thermal load as possible. The device may not be exposed to any chemical loads.

Install the device in such a manner that the plugs point downwards. This means condensation can flow off the device. Single seals on the cables/leads must be used to ensure that no water gets into the device.

Putting into operation

The device may only be put into operation by qualified staff. This may only occur when the status of the entire system corresponds to the applicable guidelines and regulations.

FAULT CORRECTION AND MAINTENANCE



NOTE The device is maintenance-free and may not be opened.

- If the device has damage to the housing, latches, seals or flat plugs, it must be taken out of operation.

Fault correction and cleaning work may only be carried out with the power turned off. Remove the device to correct faults and to clean it.

Check the integrity of the housing and all flat plugs, connections and pins for mechanical damage, damage caused by overheating, insulation damage and corrosion. In the event of faulty switching, check the software, switches and settings.

Do not clean the device with high pressure cleaners or steam jets. Do not use aggressive solvents or abrasive substances.